



| Item No. | Part No. | Description | Item No. | Part No. | Description |
|----------|-----------------|---------------------------|----------|-----------------|------------------------|
| 1 | 1481 02 00-00/7 | Keyboard | 44 | 1499 52 50-60/3 | Key top \diamond # |
| 2 | 1482 73 40-00/2 | . LED cover LH | 45 | 1481 03 50-00/0 | Key top * |
| 3 | 1484 41 60-00/3 | . Key top | 46 | 1499 55 90-70/1 | Key top K |
| 4 | 1066 30 38-40/3 | . Switch | 47 | 1499 56 00-70/8 | Key top M |
| 5 | 1067 12 16-40/5 | . Socket | 48 | 1481 03 30-00/2 | Key top T |
| 6 | 1484 41 80-00/1 | . Indicator LED green | 49 | 1481 03 40-00/1 | Key top I |
| 7 | 1066 30 42-40/5 | . Key switch LED | 50 | 1499 56 80-70/0 | Key top KOM |
| 8 | 1066 30 40-40/9 | . Key switch | | 1499 56 90-70/9 | Key top COM |
| 9 | 1066 30 41 40/7 | . Key switch, cross shaft | 51 | 1499 57 30-70/3 | Key top MARGIN LH/RH |
| 10 | 1066 30 43-40/3 | . Key switch, dummy | 52 | 1499 52 20-70/5 | Key top DEC TAB |
| 11 | 1484 52 00-00/6 | . LED cover RH | | 1499 52 80-70/9 | Key top DEZ TAB |
| 12 | 1484 16 70-00/4 | . Holder | | 1499 53 70-70/8 | Key top TAB DEC |
| 13 | 1005 10 54-40/0 | . Compression spring | 53 | 1499 57 20-70/4 | Key top TAB +/- |
| 14 | 1484 38 40-00/1 | . Holder | 54 | 1499 52 50-70/2 | Key top CNTR |
| 15 | 1463 54 40-00/2 | . Link | | 1499 53 60-70/9 | Key top CENT |
| 16 | 1498 00 00-60/9 | Key top *) | | 1499 52 70-70/0 | Key top ZENTR |
| 17 | 1490 00 00-60/6 | Key top blank **) | 55 | 1499 52 40-70/3 | Key top XXXX |
| 18 | 1484 18 50-00/2 | Key top back space | 56 | 1499 51 40-70/5 | Key top RADERA |
| | 1484 26 80-00/2 | Key top back space USA | | 1499 50 70-70/4 | Key top DEL |
| 19 | 1461 23 90-00/6 | Key top correction | | 1499 53 80-70/7 | Key top EFFA |
| 20 | 1484 18 10-00/6 | Key top carr. return | | 1499 52 90-70/8 | Key top LÖSCH |
| 21 | 1484 17 80-00/1 | Key top shift RH | | 1499 54 50-70/8 | Key top CANC MEM |
| 22 | 1482 73 00-00/6 | Key top carr. return auto | 57 | 1484 27 40-00/4 | Key top BOLD PRINT |
| 23 | 1480 95 30-00/0 | Key top TAB X | 58 | 1499 56 30-70/5 | Key top START STOP |
| 24 | 1499 55 70-70/3 | Key top = | 59 | 1499 56 50-70/3 | Key top FRAS FORM |
| 25 | 1499 55 30-70/7 | Key top + | | 1499 56 40-70/4 | Key top PHRA FORM |
| 26 | 1480 95 50-00/8 | Key top C | 60 | 1482 72 80-00/0 | Key top TAB |
| 27 | 1480 95 80-00/5 | Key top 0 | 61 | 1484 18 00-00/7 | Key top LINE FEED UP |
| 28 | 1499 52 70-60/1 | Key top 00 | 62 | 1484 17 90-00/0 | Key top LINE FEED DOWN |
| | 1499 53 70-60/9 | Key top 000 | 63 | 1484 27 60-00/2 | Key top TAB. REL. |
| 29 | 1499 52 60-60/2 | Key top . | 64 | 1499 51 50-70/4 | Key top KOD |
| 30 | 1499 52 80-60/0 | Key top 1 | | 1499 50 80-70/3 | Key top CODE |
| 31 | 1499 52 90-60/9 | Key top 2 | 65 | 1484 18 60-00/1 | Key top SHIFT LOCK |
| 32 | 1499 53 00-60/6 | Key top 3 | 66 | 1484 17 70-00/2 | Key top SHIFT LH |
| 33 | 1499 53 10-60/5 | Key top 4 | 67 | 1484 18 70-00/0 | Key top SPACE BAR |
| 34 | 1499 53 20-60/4 | Key top 5 | 68 | 1005 32 84-00/5 | Screw MCS 4x5 |
| 35 | 1499 53 30-60/3 | Key top 6 | 69 | 1481 02 60-00/1 | Keyboard holder LH |
| 36 | 1499 53 40-60/2 | Key top 7 | 70 | 1481 02 70-00/0 | Washer |
| 37 | 1499 53 50-60/1 | Key top 8 | 71 | 1005 32 29-00/0 | Screw MCS 3x18 |
| 38 | 1499 53 60-60/0 | Key top 9 | 72 | 1481 02 80-00/9 | Filler |
| 39 | 1499 55 40-70/6 | Key top % | 73 | 1481 04 30-00/0 | Keyboard holder RH |
| 40 | 1499 55 50-70/5 | Key top %+ | 74 | 1067 12 02-40/5 | Connector |
| 41 | 1499 55 60-70/4 | Key top %- | 75 | 1482 69 20-00/2 | Cable |
| 42 | 1480 95 40-00/9 | Key top += | | | |
| 43 | 1481 03 60-00/9 | Key top -= | | | |

*) Tangentknappar med tre symboler har artikel nr 1498 00 00-60/9. OBS: Ange samtliga tre symboler vid beställning.

Special key tops with three symbols have Part No. 1498 00 00-60/9. NOTE: When ordering state all three symbols.

**) State symbols when ordering.